



Installation and Instruction Sheets

ZBA - ADJUSTABLE SCREW GUN BRACKET FOR WOOD OR METAL STUDS

SHEET: 1 OF 2

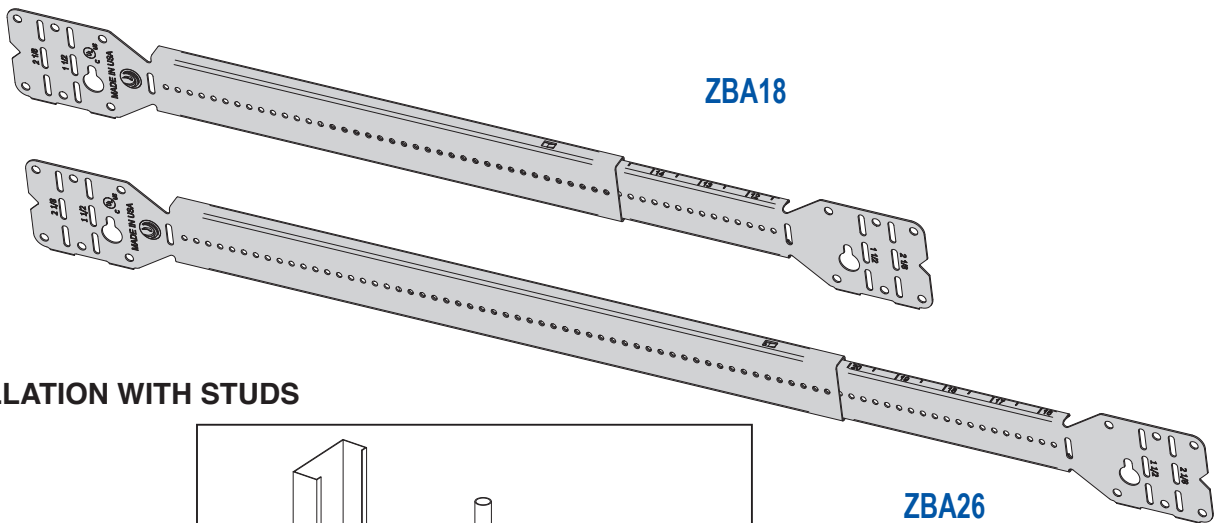

INSTALLATION WITH STUDS

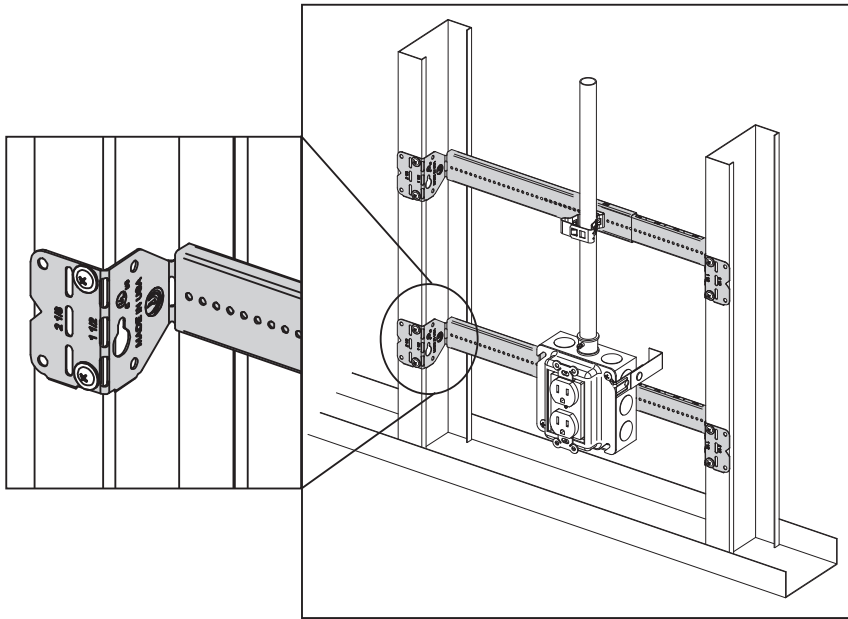

Notes:

- STS8 low profile screws recommended for installation
- For wet or dry applications.
- ZBA18 and ZBA26 are not to be used at distances greater than 18" and 26" on center respectively.
- For use with 1-1/2" to 2-1/8" deep boxes only.
- Far side support required for Canadian installations.

Catalog Number	Stud Centers	Distance Between Studs	Box Depth
ZBA18PG	11" to 18"	10" to 16-3/4"	1-1/2" or 2-1/8"
ZBA26PG	16" to 26"	14" to 25-1/4"	1-1/2" or 2-1/8"



Call ZSi-Foster at
(800) 323-7053
or order now at
ZSi-Foster.com


Revision: 2

CUSTOMER RESPONSIBILITIES: At a minimum the customer(s) is responsible for using industry standard hardware and fasteners, inspecting the structural integrity of the structure to which ZSi-Foster products will be attached, conforming to all governing codes and regulations at the job site and following all safety precautions related to the work being performed.

WARNING: ZSi-Foster products must never be used for purposes other than those for which they were designed or in any way that exceeds published load ratings. All load ratings are for static conditions and do not account for dynamic loading such as wind, water or seismic loads. ZSi-Foster products must be installed and used only as indicated in ZSi-Foster installation and instruction sheets. Improper installation, misuse, misapplication or any other failure to completely follow ZSi-Foster's instructions could lead to decreased load rating, product failure, property damage, injury or even death.


STEP 1:

Separate bracket

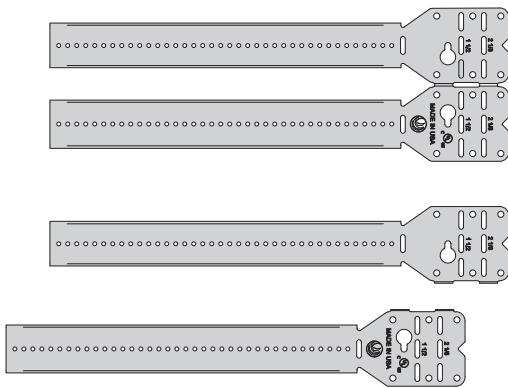

STEP 2:


Assemble bracket

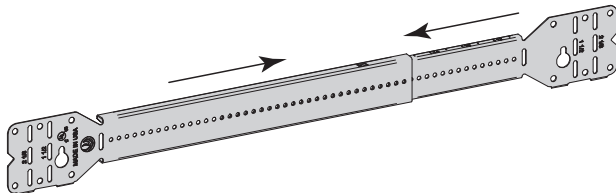


STEP 3:

Bend bracket based on box depth

Bend here for 2-1/8" box depth.

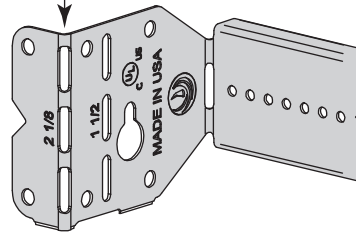


Bend here for 1-1/2" box depth.

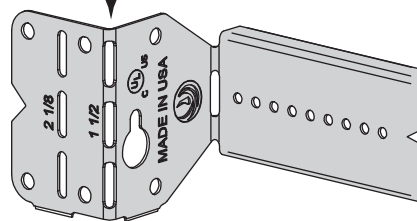

STEP 4:

METAL STUD INSTALLATION


Screw bracket to studs using STS8 screws. Position electrical box(es) or accessories on bracket and install with STS8 screws. Assemble box plaster ring(s). (far side support required for Canadian installations)

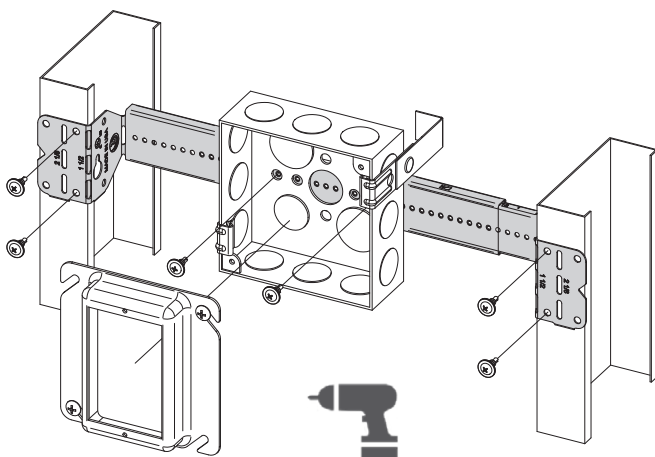

STEP 4:

WOOD STUD INSTALLATION

Nail bracket to wood studs. Position electrical box(es) or accessories on bracket and install with STS8 screws. Assemble box plaster ring(s). (far side support required for Canadian installations)

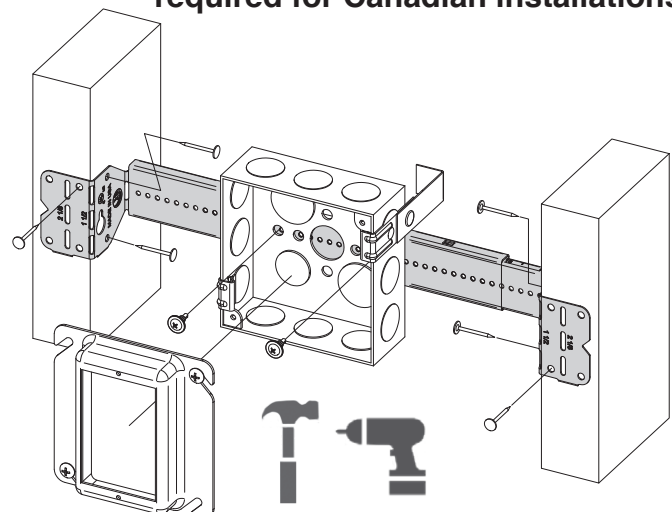

Call ZSi-Foster at (800) 323-7053 or order now at ZSi-Foster.com